



Connectors are not shown.
 Use JST Connectors for the AIM Batteries.
 Use Molex for the Raven Battery.
 Use JST Connectors to connect the computers to the bulkheads.
 Use Molex for the Thermistors.